

WWW.INFIRE.PL



INSTALLATION CARD
BIO-FIREPLACE Simpleboxes 400,500,600 weight 8,10,12kg

**INFIRE KAROL LIPKA
UL. OBWODOWA 3
11-500 GAJEWO**

Kontakt:
biuro@infire.pl
infire@wp.pl

THIS DOCUMENT IS PART OF THE DEVICE

INSTALLATION

Please make sure that the set delivered to you contains all the elements, that is:

- fireplace (housing)
 - steel long handle for adjusting and extinguishing a flame
1. Choose the room in which you want to use the fireplace. The room in which the device will be used should have a minimum area of 20m².
 2. When using the fireplace in a room, the window must be tilted.
 3. The room in which the fireplace is used should always be ventilated, as it absorbs oxygen from the air. Do not install the fireplace in a place where it will be exposed to draught!
 4. Do not place any objects on the housing or inside the fireplace.
 5. Do not place any flammable materials in a distance of at least 2 m from the device.
 6. Convection air slots and rear ventilation should not be obstructed.

Infire is not liable for damage resulting from incorrect installation of the fireplace or from installation of the fireplace on an unsuitable wall/floor.